








EROSION CONTROL BLANKETS SLOPE

Created: January 31, 2012

Revised: January 19, 2017

Scale: N.T.S.

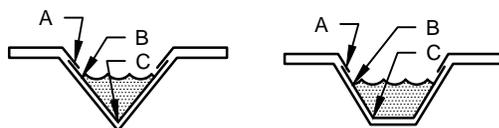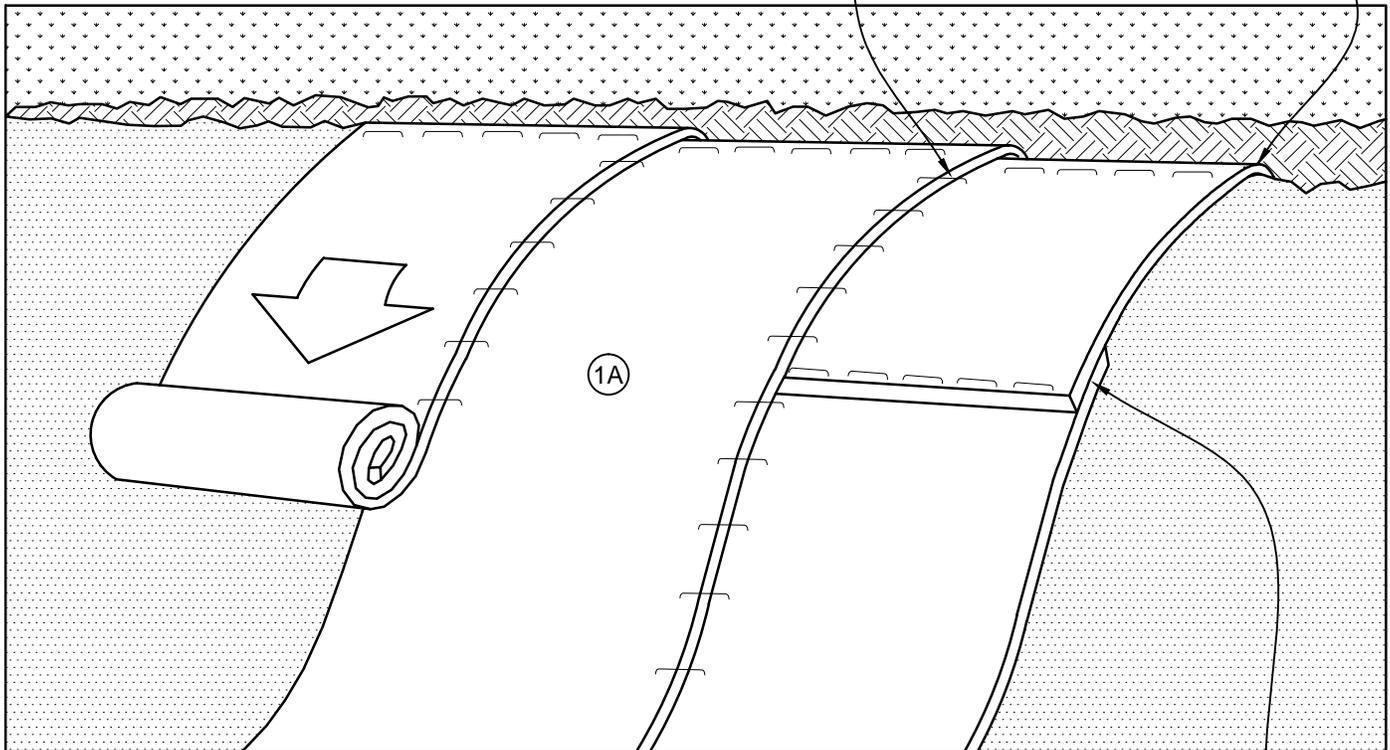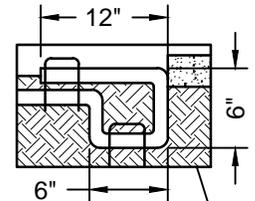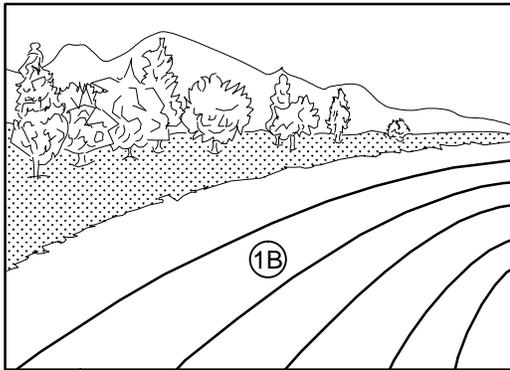

CRITICAL POINTS

- A. OVERLAPS AND SEAMS
- B. PROJECTED WATER LINE
- C. CHANNEL BOTTOM/SIDE SLOPE VERTICES

NOTES:

1. ROLL THE BLANKETS (A.) DOWN OR (B.) HORIZONTALLY ACROSS THE SLOPE.
2. HORIZONTAL STAPLE SPACING SHOULD BE ALTERED IF NECESSARY TO ALLOW STAPLES TO SECURE THE CRITICAL POINTS ALONG THE CHANNEL SURFACE.
3. IN LOOSE SOIL CONDITIONS, THE USE OF LONGER STAPLES MAY BE NECESSARY TO PROPERLY ANCHOR THE BLANKETS.