




TEMPORARY ROCK CHECK DAMS

Created: March 24, 2011


Revised: January 24, 2017

Scale: N.T.S.


FRONT VIEW

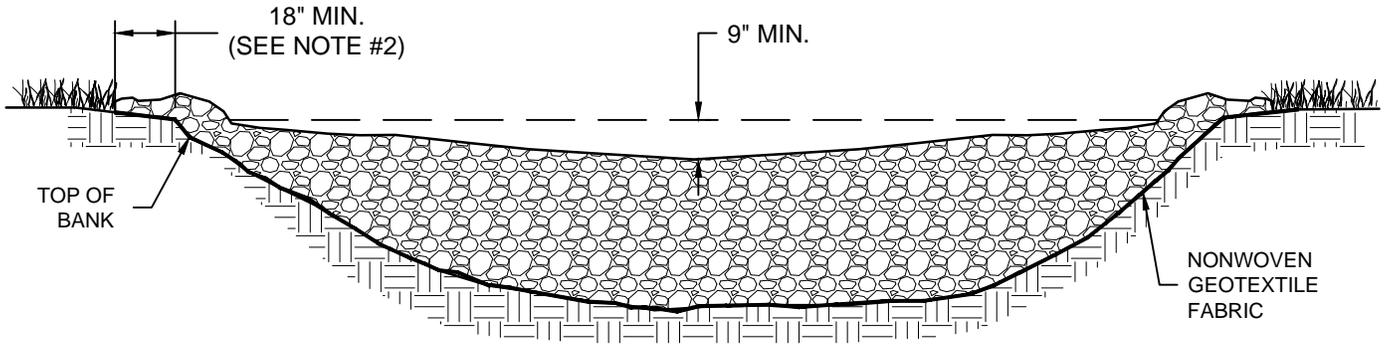

CROSS SECTION VIEW

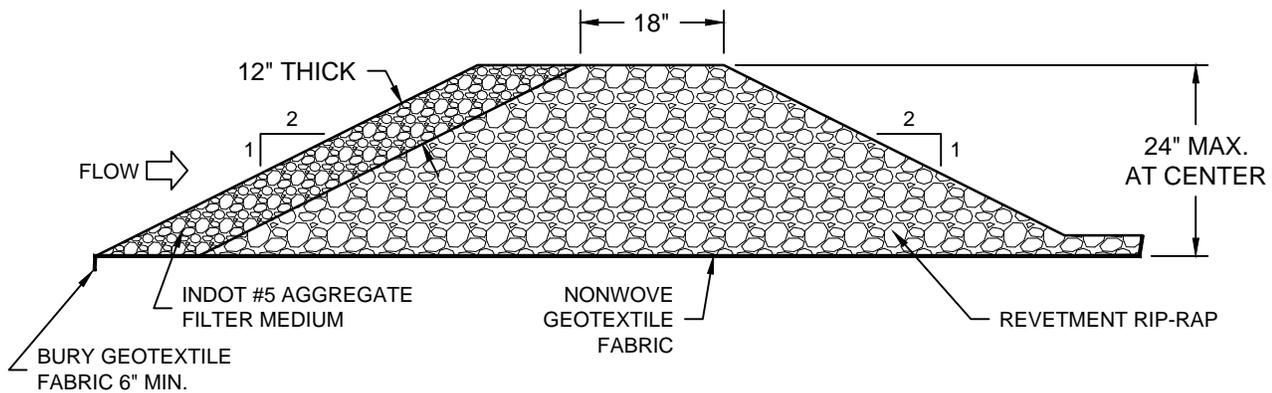

PROFILE VIEW

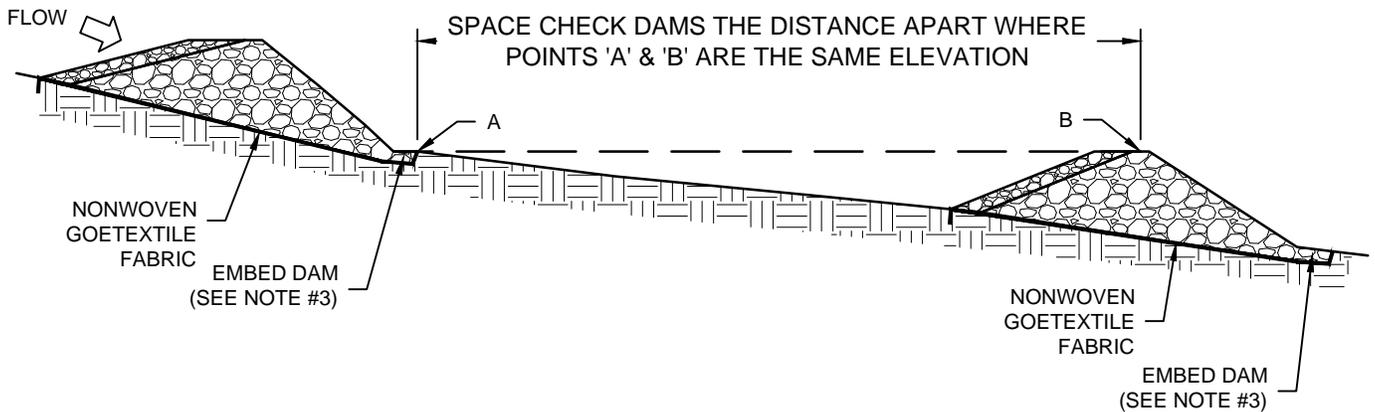

NOTES:

1. DO NOT USE CHECK DAMS IN PERENNIAL STREAMS.
2. EXTEND THE RIPRAP AT LEAST 18" BEYOND THE TOP OF THE CHANNEL BANKS TO KEEP OVERFLOW WATER FROM ERODING AREAS ADJACENT TO THE CHANNEL BANKS BEFORE IT RE-ENTERS THE CHANNEL.
3. EMBED ROCK CHECK DAM 12" BELOW EXISTING GROUND.