




84"-96" SANITARY MANHOLE

Created: January 1, 2002

Revised: July 29, 2014

Scale: N.T.S.

Approved: May 16, 2012

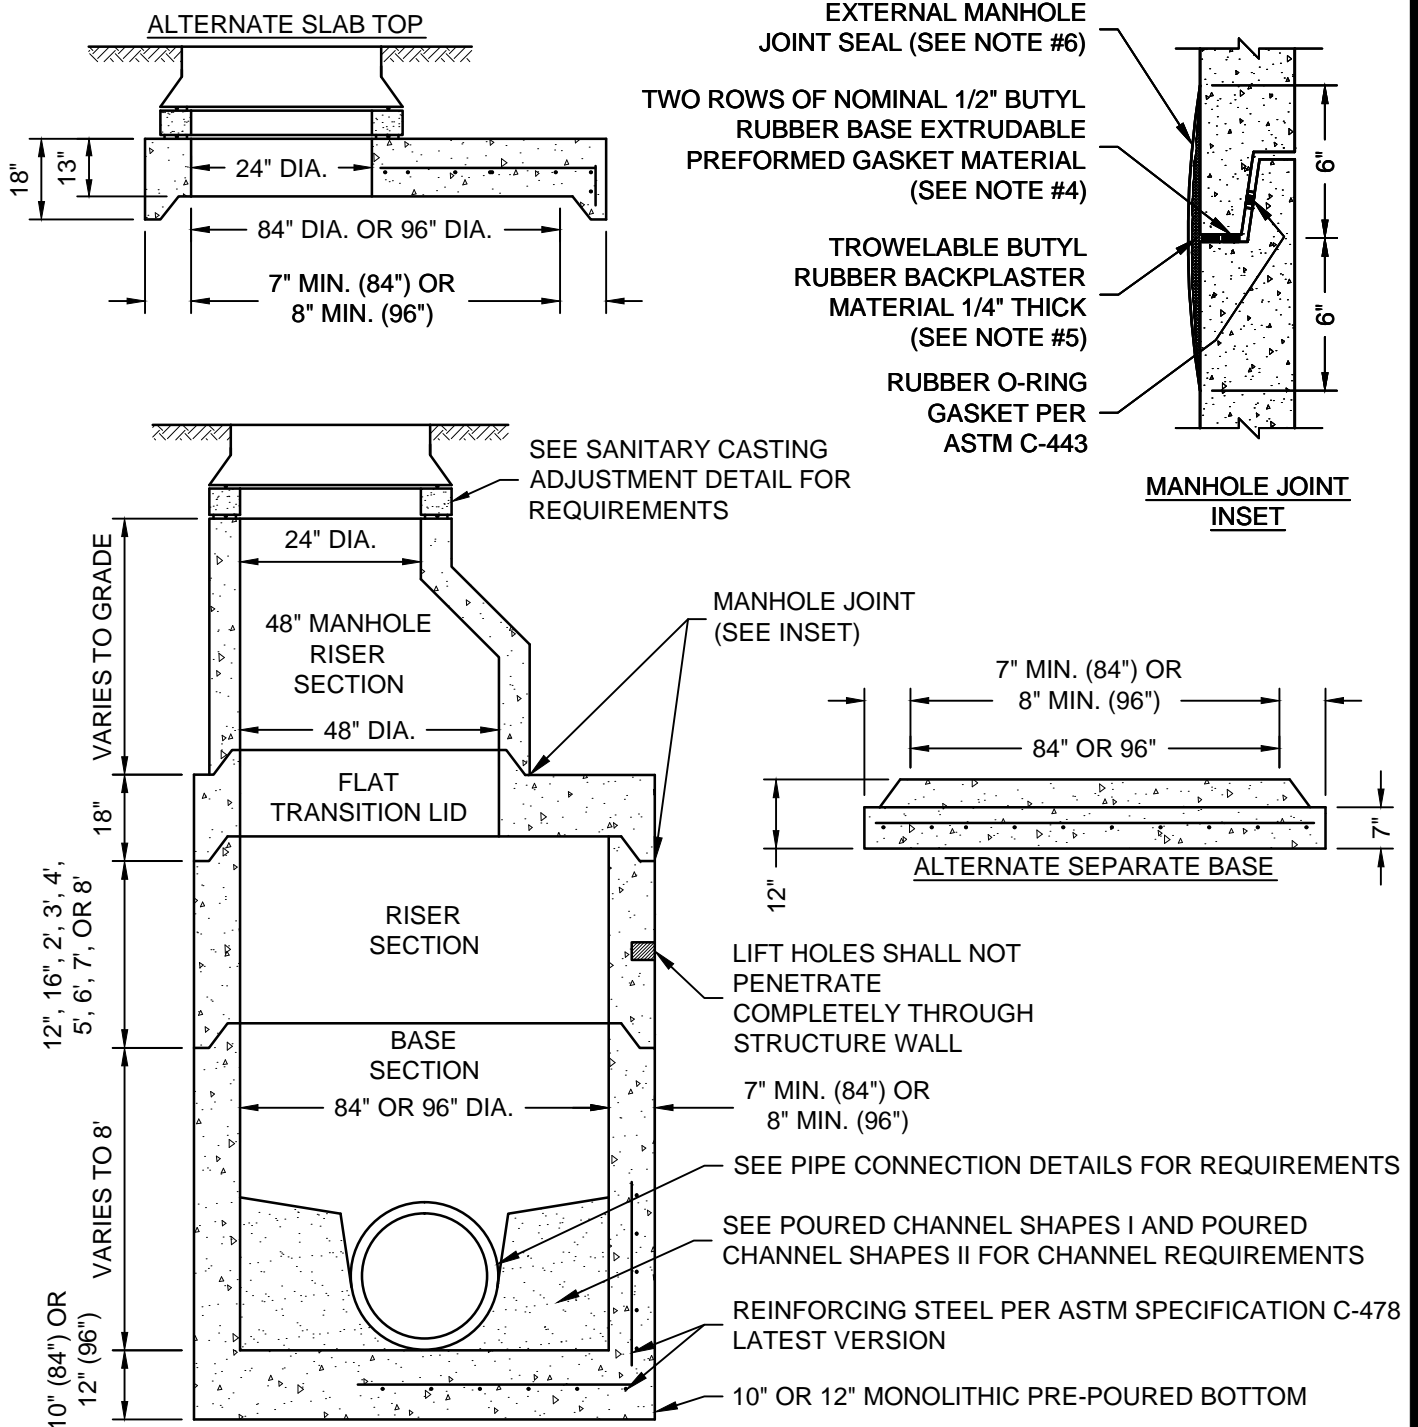

NOTES:

1. FOR ALTERNATE CAST-IN-PLACE BASE, SEE CAST-IN-PLACE BASE 54"-96" DETAIL.
2. THE BASE SHALL BE PLACED ON COMPACTED FRACTURED FACE STONE, 6" MINIMUM.
3. THE INSIDE WALL DISTANCE BETWEEN OPENINGS SHALL BE A MINIMUM OF 6".
4. USE RU 106 RUB'RNEK LTM AS MANUFACTURED BY HENRY CO., KENT-SEAL NO. 2 AS MANUFACTURED BY HAMILTON-KENT OR EZ-STICK BUTYL-RUBBER-BASED PREFORMED FLEXIBLE SEALANT AS MANUFACTURED BY PRESS-SEAL.
5. APPLY TROWELABLE BUTYL RUBBER BACK PLASTER MATERIAL 1/4" THICK (WHEN DRY) FROM 6" ABOVE TO 6" BELOW JOINTS. USE TROWELABLE EZ-STICK #3, AS MANUFACTURED BY PRESS-SEAL GASKET CORP.
6. EXTERNAL MANHOLE JOINT SEAL SHALL CONSIST OF A SHEET OF PLASTIC VISQUEEN.